


## ASSEMBLY PROCEDURES

- 1. STRIP CABLE AS SHOWN. SLIDE FERRULE OVER CABLE & CRIMP CONTACT TO CENTER CONDUCTOR.
- 2. INSTALL CABLE INTO BODY. PUSH CABLE FORWARD UNTIL CONTACT IS IN THE CORRECT POSITION.
- 3. CRIMP FERRULE

## **CRIMP SIZES REQUIRED**

CONTACT: .068" HEX CRIMP TOOL FERRULE: .255" HEX CRIMP TOOL

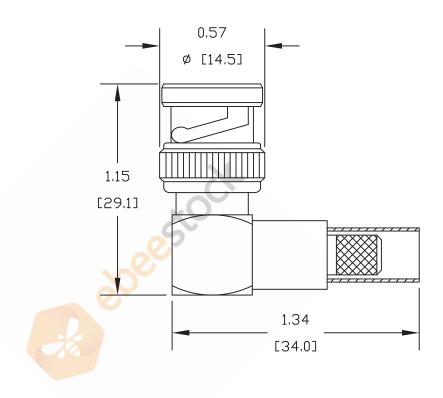



8TH FLOOR, BUILDING 1, YONGFU SCIENCE AND TECHNOLOGY CENTER INDUSTRIAL PARK, NANZHA DISTRICT 5, HUMEN,523900, DONG GUAN, GUANGDONG, CHINA

> WEBSITE: www.ebeestock.com EMAIL: sales@ebeestock.com

DWG TITLE

ET10339

- NOTES:

  1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL.

  2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

  3. DIMENSIONS ARE IN INCHES [mm].

  4. FITS MIL-C-17 AND EQUIVALENT CABLES.

ebeestock

REV. -

FSCM NO. 53919

CAD FILE 042309

SCALE N/A

SIZE A

147