


ATERIALS	
BRASS NICKEL PLATED	-
GOLD PLATED	-
PTFE	
BRASS GOLD PLATED	
	BRASS NICKEL PLATED GOLD PLATED PTFE

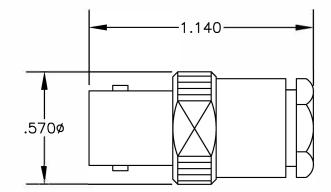


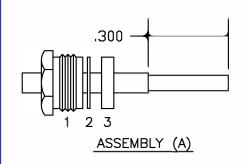

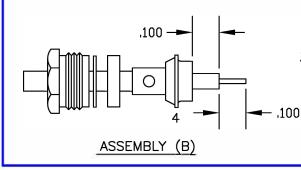

ASSEMBLY PROCEDURES

- 1. SLIDE CLAMP NUT (1), WASHER (2) & GASKET (3) OVER CABLE. STRIP CABLE AS SHOWN IN ASSEMBLY (A). DO NOT CUT DIELECTRIC.
- SLIDE ADAPTER (4) OVER CABLE UNTIL ADAPTER (4) BOTTOMS ON OUTER CONDUCTOR. SOLDER ADAPTER (4) TO OUTER CONDUCTOR USING MINIMUM HEAT.
- 3. STRIP CABLE AS SHOWN IN ASSEMBLY
 (B). SOLDER CONTACT TO CENTER
 CONDUCTOR. SLIDE ASSEMBLY
 FORWARD & TIGHTEN TO BODY.

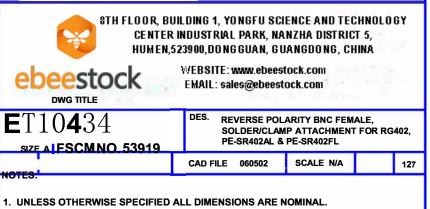

2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.