




ASSEMBLY PROCEDURES

- 1. STRIP CABLE AS SHOWN [FOIL SHOULD REMAIN ON DIELECTRIC].
- 2. FOLD BRAID BACK OVER JACKET.
- 3. INSERT PREPARED CABLE INTO CONNECTOR. PUSH CABLE FORWARD INTO CONNECTOR WHILE SLIGHTLY TWISTING CONNECTOR AND CRIMP.

CRIMP SIZE REQUIRED

FERRULE: .255" HEX CRIMP TOOL

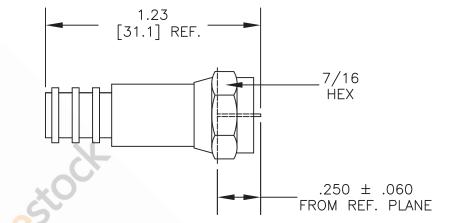



8TH FLOOR, BUILDING 1, YONGFU SCIENCE AND TECHNOLOGY CENTER INDUSTRIAL PARK, NANZHA DISTRICT 5, HUMEN,523900, DONG GUAN, GUANGDONG, CHINA

EMAIL: sales@ebeestock.com

DWG TITLE ET10559	NOTES: 1. UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE NOMINAL. 2. ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME. 3. DIMENSIONS ARE IN INCHES [mm]. 4. FITS MIL-C-17 AND EQUIVALENT CABLES.			
FSCM NO. 53919	CAD FILE 050514	SCALE N/A	SIZE A	2233